

Remote Control Door Lock

LOCKEY



Hyundai Trade Corporation
Hyundai Hightech Inc.

<http://www.hyundaitrade.com>

<http://www.biocav.co.kr>

info@hyundaitrade.com, biocav@biocav.co.kr

Tel : 82-2-989-0125, Fax :82-2-989-0165



#1404 e-Tech Velly, 95-7 Suyu-dong

Gangbuk-gu Seoul Korea 142-070

How to use product

- Slide open battery cover from the main body in (▼) direction and put in 2 AA sized alkaline batteries
- Firmly close battery cover at the main body
- After installing device, always check whether the remote control is functioning properly with a person at the inside part of the door (Check respectively at both sides of the door)
 - Transmission distance from the remote control
 - Best location for frequency transmission and receipt
 - Adjust direction of the antenna
(Best location will be 90° from the main body but this may differ according to the environment.)
 - Alarm tone will ring from the main body when locked or open
- Lock. Open dial tone of product
 - Lock button → single touch → “beep---” → main body locks up
 - Open button → single touch → “beep, beep, beep” → open main body



-  Alarm to inform time to change the battery
When the LED starts flickering every four seconds and there is a cricket sound from the main body, the battery must be changed to a new one immediately
-  Manual lever
Manual lever is designed to open easy when pressed with a hand. It is safe for use in emergency situations such as fire.

Register and deleting remote control in main body



- How to register
 - Open battery cover
 - Register button is located at the left center of the battery holder
 - Keep pressing the register button for 2 seconds using a with a thin device
 - LED will start flickering with a beeping tone
 - Press all 4 remote controls for a second until they make a beeping tone
 - Press the register button again for a second until they make a beeping tone
 - Registration completed. Check whether the main body is operating properly.



Register of Remote Key

- How to delete
 - Gather all remote controls that can be used when the remote control is lost
 - Register again with the above method
 - Registration for the lost remote control is deleted and thus safe to use

Registration of the remote control

Registration of the remote control ①

REMOCK cannot use other than the registered remote controls. Although the product is already registered in shipment, registering it again after purchase enables safer use. First open the battery cover from the main body. Turn the small slide switch next to the battery to the left using a (-) driver.



Registration of the remote control ②

Press any one side of the remote control button with the slide switch put on the left side. When the alarm beeps from the main body, the remote control is registered. Register all remote controls to be used using the same method. Registration is complete by turning the slide switch to the right as the



Installation and disassembly methods

Assembly of base plates

First measure the distance from the door's installation surface to the door limits. Use a short bolt when the door limit is between 25mm~45mm and use a long bolt or a bracket when it's between 45mm~75mm. Stick the bolt from where the side of the adhesive tape stuck. Fix the big nut with attached spanner. Assemble this exactly alike in the holes at four corners.



Cleaning the Remock installation side

Because REMOCK uses adhesive tape, dust, oil, dirt and fingerprints on the set up layer should be cleaned thoroughly using alcohol before adhering. When the set up surface has old paint, take off the paint first before installation. (The paint can be come down with the tape.) Adhesive power may drop in case of rugged or wooden door.



Using simple installation jig

When installing at the upper part of the door, cling simply using a jig. (Do not use when attaching vertically) Install jig as shown in the picture into the bolt on the assembled base plate. (Photo) Remove protective film from the adhesive tape, let the upper part of the jig touch the bottom of the door frame and then press firmly. (Photo) (Exercise caution as it cannot be taken off once adhered) Peel off the jig after it's adhered. (Photo)



Pressing adhesive tape

Always support splint by the door as shown in the picture and remove bubbles inside the adhesive tape using clamp. (Fixing without a splint may cause scratch to the door.) When without proper tools, remove bubbles by pressing hard and evenly from center to outside using hands. Take off the jig after it's attached. (Photo)



— Installation of the main body

Fasten 4 small nuts into a bolt (Photo)

Fix main body of the REMOCK into a bolt with the latch gone up and adjust height.

It is best to keep the latch 2mm from the doorframe. (Photo)

Check whether the REMOCK hangs level to the door and fix the main body with the remaining 4 nuts.

Screw up with attached spanner. (Photo)

Insert cap nut.



— Confirm operation

Always check operations after installation.

When operating from the outside, always test with someone indoors.

State of transmission could differ depending on the location and area of installation. Adjust antenna angle to its optimum location.

When the door is opened and shut with latch still on, check whether it sticks to the doorframe.

Screw up with attached spanner. (Photo)

Insert cap nut.



Hyundai Trade Corporation
Hyundai Hightech Inc.

<http://www.hyundaitrade.com>

<http://www.biocav.co.kr>

info@hyundaitrade.com, biocav@biocav.co.kr

Tel : 82-2-989-0125, Fax :82-2-989-0165

#1404 e-Tech Velly, 95-7 Suyu-dong
Gangbuk-gu Seoul Korea 142-070